



# EPLAN License Manager Basic Configuration Guide

Version 7.1.7  
Status: 02/2017



EPLAN Software & Service GmbH & Co. KG  
Technical Information

# EPLAN License Manager Basic Configuration Guide

Version 7.1.7

Status: 02/2017



Copyright © 2017 EPLAN Software & Service GmbH & Co. KG

EPLAN Software & Service GmbH & Co. KG assumes no liability for either technical or printing errors, or for deficiencies in this technical information and cannot be held liable for damages that may result directly or indirectly from the delivery, performance, and use of this material.

This document contains legally protected proprietary information that is subject to copyright. All rights are protected. This document or parts of this document may not be copied or reproduced by any other means without the prior consent of EPLAN Software & Service GmbH & Co. KG.

The software described in this document is subject to a licensing agreement. The use and reproduction of the software is only permitted within the framework of this agreement.

RITTAL® is a registered trademark of Rittal GmbH & Co. KG.

EPLAN®, EPLAN Electric P8®, EPLAN Fluid®, EPLAN Preplanning®, EPLAN Pro Panel® and EPLAN Harness proD® are registered trademarks of EPLAN Software & Service GmbH & Co. KG.

Windows 7®, Windows 8®, Windows 8.1®, Windows 10®, Windows Server 2008 R2®, Windows Server 2012®, Windows Server 2012 R2®, Windows Server 2016®, Microsoft Windows®, Microsoft® Excel®, Microsoft® Access® and Notepad® are registered trademarks of the Microsoft Corporation.

PC WORX®, CLIP PROJECT®, and INTERBUS® are registered trademarks of Phoenix Contact GmbH & Co.

AutoCAD® and AutoCAD Inventor® are registered trademarks of Autodesk, Inc.

STEP 7®, SIMATIC® and SIMATIC HW Config® are registered trademarks of Siemens AG.

InstallShield® is a registered trademark of InstallShield, Inc.

Adobe® Reader® and Adobe® Acrobat® are registered trademarks of Adobe Systems Inc.

TwinCAT® is a registered trademark of Beckhoff Automation GmbH.

Unity Pro® is a registered trademark of Schneider Electric.

RSLogix 5000® and RSLogix Architect® are registered trademarks of Rockwell Automation.

All other product names and trade names are trademarks or registered trademarks of their respective owners.

EPLAN uses the Open Source software 7-Zip (7z.dll), Version 16.00, Copyright © by Igor Pavlov. The source code of 7-Zip is subject to the GNU Lesser General Public License (LGPL). The source code of 7-Zip and details on this license can be found on the following Web site: <http://www.7-zip.org>



# Table of Contents

<b>Introduction .....</b>	<b>5</b>
<b>Notes for the Reader .....</b>	<b>6</b>
<b>Preconditions .....</b>	<b>7</b>
Software.....	7
Approved for .....	8
<b>Configuring EPLAN License Manager Basic.....</b>	<b>9</b>
<b>Validating / Updating a License.....</b>	<b>10</b>
<b>Defining Bundles .....</b>	<b>11</b>
Defining new bundles .....	16
Editing bundles .....	17
<b>Determining Properties .....</b>	<b>18</b>
Changing the password for the configuration program.....	19



# Introduction

Dear users,

The team at EPLAN Software & Service GmbH & Co. KG is pleased to welcome you as a new user.

You have installed the EPLAN License Manager. You will find any information you may need in the EPLAN License Manager Installation Guide.

The document at hand will walk you through the configuration of the EPLAN License Manager Basic (ELM Basic) Functionalities of the EPLAN License Manager that exceed the standard scope of this program version will be described in the configuration guide of EPLAN License Manager Professional.

These instructions are aimed at administrators who are already familiar with EPLAN and who have an in-depth knowledge of programs and systems.

## Notes for the Reader

Before you begin reading, please note the following symbols and styles used in this document:

### **Warning:**

Texts preceded by this image are warnings. You should be absolutely sure to read this warning before proceeding!

### **Note:**

Text preceded by this image contains extra notes.

### **Tip:**

Useful tips to facilitate your interaction with the program are presented after this image.

### **Example:**

Examples are highlighted by this symbol.

- User interface elements are marked in **bold** so they can immediately be located in the text.
- *Italic* text provides particularly important information that you should definitely pay attention to.
- Code examples, directory names, and direct input (among other elements) are displayed in a `non-proportional` font.
- Function keys, keyboard keys, and buttons within the program are shown in square brackets (e.g., **[F1]** for the "F1" function key).

- To improve the flow of the text, we often use "menu paths" in this document (for example, **Start > Run**). In order to find a particular program function, the menus and options shown in a menu path must be selected in the sequence shown. For example, the menu path mentioned above calls up the EPLAN help system.
- The operating information provides step-by-step instructions for reaching specific targets, and in many places, after the right-arrow symbol  $\Rightarrow$  you'll also find the reaction of the program to your action.
- In combination with settings or fields (e.g., check boxes) which can only be switched on or off, in this document we often use the term "activate" (after which the setting is active ) and "deactivate" (after which the setting is inactive )

## Preconditions

In order to run the EPLAN License Manager the following conditions must be satisfied:

### Software

The following software preconditions must be satisfied:

- An operating system for which the EPLAN License Manager has been released must be installed (see also the following section: "Approved for").
- It is also assumed that the computer systems all have the latest security updates.
- The installation must be performed from a user account with rights equivalent to an Administrator.
- The dongle must be connected to the computer where the EPLAN License Manager is to be installed.

 **Note:**

Characters that do not occur in the Latin alphabet are not supported by the EPLAN License Manager (for example Chinese, Cyrillic characters, etc.). If you want to use the EPLAN License Manager, you may only use characters in ASCII format for your user and computer names.

Please inform yourself about the hardware prerequisites and the software approvals of the EPLAN Platform before installing EPLAN products. This information is available in the EPLAN performance descriptions of the respective products.

## Approved for

### Client computer

- Microsoft Windows 7 SP1 (64 Bit)  
Professional, Enterprise and Ultimate.
- Microsoft Windows 8 (64 bit)  
Pro, Enterprise.
- Microsoft Windows 8.1 (64 bit)  
Pro, Enterprise.
- Microsoft Windows 10 (64 bit)  
Pro, Enterprise.

### Server


- Microsoft Windows Server 2008 R2 (64 bit)
- Microsoft Windows Server 2012 (64 bit).
- Microsoft Windows Server 2012 R2 (64 bit)
- Microsoft Windows Server 2016.




# Configuring EPLAN License Manager Basic

During the installation of the EPLAN License Manager a shortcut to the "ELM Configurator" is created on the Windows desktop. You can use this shortcut to launch the configuration program for the EPLAN License Manager.

## Launching the configuration program

1. Double-click the icon "ELM Configurator"  .

⇒ The **EPLAN License Manager – Configurator** dialog opens.

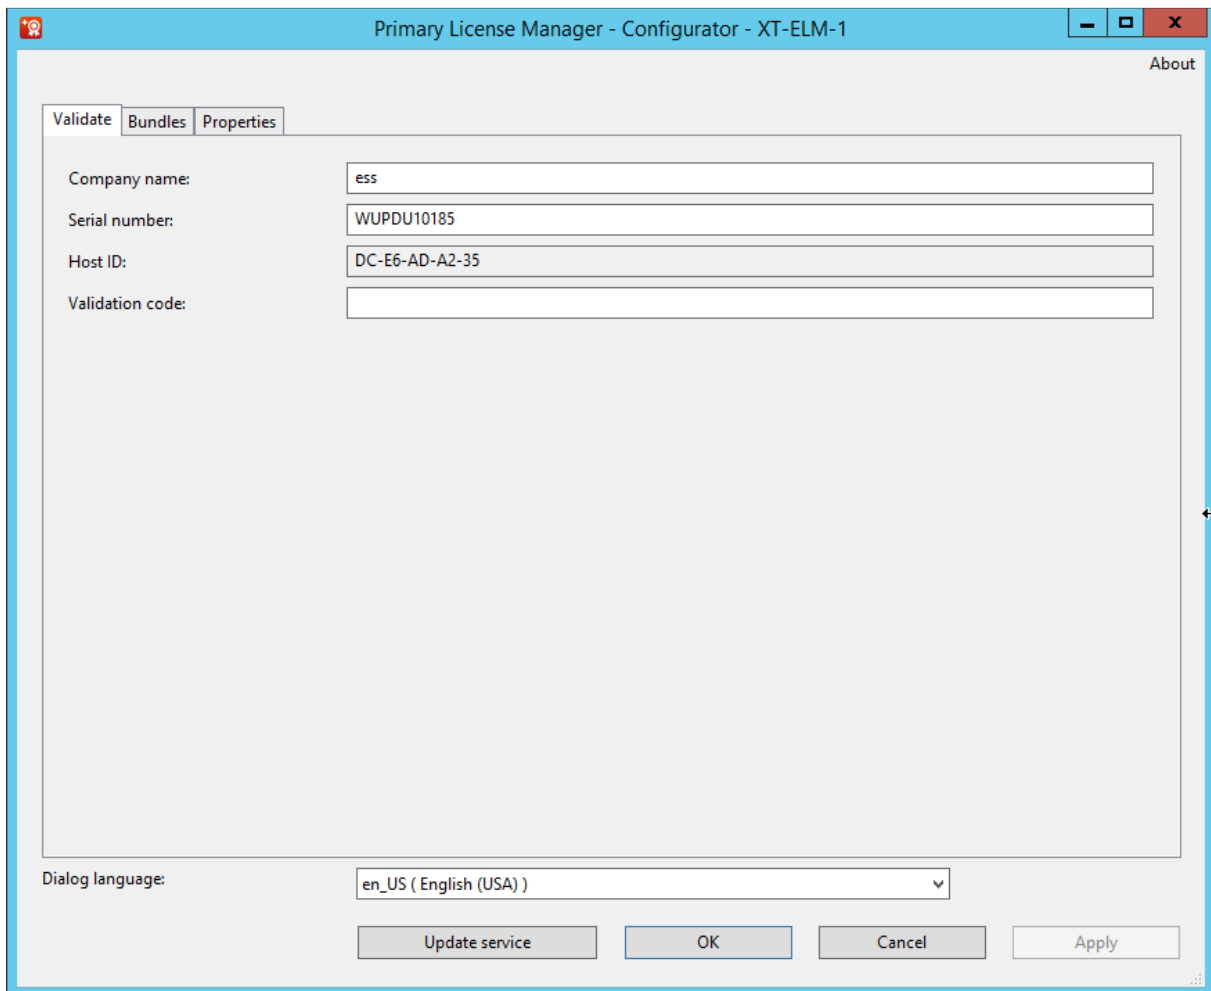

Primary License Manager - Configurator - XT-ELM-1

Validate Bundles Properties

Company name:

Serial number:

Host ID:

Validation code:

Dialog language:

Update service OK Cancel Apply

#### **Notes:**

- You can also launch the configuration program via the Windows Start menu. Installation of the EPLAN License Manager creates the menu items **ELM > ELM Configurator** in the **EPLAN** program group.
- Clicking **[Apply]** saves your new settings in the configuration program, leaving the dialog open.
- Clicking **[Update service]** updates the EPLAN License Manager. Your new settings in the configuration program are now also available to users during license selection in the dialog **Select license**.

## Validating / Updating a License

In the **Validate** tab, enter a validation code for the EPLAN License Manager – you can do this during installation or later.

### Adding a license

1. To add a validation to the EPLAN License Manager, switch to the **Validate** tab.
  2. Enter the validation code you received from EPLAN into the **Validation code** field.
  3. Then click **[Apply]**.
- ⇒ The licensing scope is displayed in the **Validated license** dialog. The "license pool" of available systems and extensions in the **Bundles** tab is updated. The **EPLAN License Manager - Configurator** dialog will remain open, and you can select additional settings.

### Adding a rental license

The EPLAN rental licenses consist of rental licenses that can have different validation periods.

This functionality is available for the first time with the Version 7.1.7 of the EPLAN License Manager.



**Note:**

Previous versions before Version 7.1.7 do not support the rental license.

For further rental licenses you first have to enter a new validation in the **Validate** tab in the "ELM Configurator" program. This validation is limited in time and expires after a defined period.



**Note:**

The expiry time of the rental license is set to the UTC time. This means that if a license expired on 01/01/2018, UTC time + 1 hour = local time (in Germany (without consideration of the Daylight Savings Time)).

1. To add a validation to the EPLAN License Manager, switch to the **Validate** tab.



**Note:**

If you have a deviating serial number beginning with "E001", you can use the serial number displayed in the **Validate** dialog.

2. Enter the validation code of your basic license or rental license that you received from EPLAN into the **Validation code** field.
  3. Then click **[Apply]**.
- ⇒ The basic license "Unlimited" and the rental license with expiry are displayed























 
 





## Defining Bundles



In the **Bundles** tab you can define bundles for network licensing. "Bundling" of licenses allows you to group the various licenses for systems and extensions into practical, well-defined groups.




### Available systems and extensions:

After the EPLAN License Manager has been validated, this box shows all available systems and extensions grouped by their basic or rental licenses respectively. The basic license is displayed on the basis of the dongle number, a rental license is displayed with the first character of your dongle number, followed by "001" and the remaining digits and characters of your dongle number. The expiry date is shown for every displayed license.

Available systems and extensions:

Systems / extensions	Total number	Available number	Expiration date
 WUPDU10185			Unlimited
 Release: EPLAN Electric P8 2.6	10	9	
 Release: EPLAN Electric P8 2.5	10	10	
 Release: EPLAN Electric P8 2.4	10	10	
 Release: EPLAN Electric P8 2.3	10	10	
 Release: EPLAN Electric P8 2.2	10	10	
 Release: EPLAN Electric P8 2.1	10	10	
 Release: EPLAN Electric P8 2.0	10	10	
 Release: EPLAN Electric P8 1.9 Servi...	10	10	
 Release: EPLAN Electric P8 1.9	10	10	
 Release: EPLAN Electric P8 1.8	10	10	
 Release: EPLAN EDZ Format 2.6	10	10	
 Release: EPLAN EDZ Format 2.5	10	10	
 Release: EPLAN eCI@ss Import 2.6	10	9	
 Release: EPLAN eCI@ss Import 2.5	10	10	
 Release: EPLAN Data Portal 2.6	10	9	
 Release: EPLAN Data Portal 2.5	10	10	
 Module: EPLAN Pages unlimited	10	9	
 Module: EPLAN eCI@ss Import	10	9	
 Module: EPLAN Data Portal	10	9	
 Language: All	10	9	
 EPLAN Electric P8 - Professional	10	9	
 W001U10185			15.04.2017
 Release: EPLAN User Rights Manage...	30	30	
 Release: EPLAN User Rights Manage...	30	30	
 Release: EPLAN User Rights Manage...	30	30	
 Release: EPLAN User Rights Manage...	30	30	
 Release: EPLAN User Rights Manage...	30	30	
 Release: EPLAN User Rights Manage...	30	30	




Systems (such as "EPLAN Electric P8 - Professional") are indicated with a red icon  and extensions with a blue icon . Extension can constitute a language (such as "EPLAN Language: German") or an add-on module (like "EPLAN - API Extension").







-  **Notes:**
- Use the button  (Move right) or double-click a system / extension to add it to a bundle.
  - Double-clicking a system / extension or clicking the Move left button  decreases the allocated number of the selected system or the marked extension by "1". If the number is already "1", the system / extension is deleted from the bundle.

### Defined bundles:

This box displays all defined bundles. We distinguish between the following bundles:








 
Extension of the static and variable icons depending on the stored license (systems / modules).

Bundle definition	Icon	Meaning
Standard bundle		It contains all the systems and modules of your licensing scope. These are usually displayed in the EPLAN License Client.
		Warning (standard bundle): The existing systems / modules are no longer available in the licensing scope. The existing bundle can, however, be started.
		Error (standard bundle): The existing systems / modules are no longer available in the licensing scope. The existing bundle cannot be started.

Bundle definition	Icon	Meaning
Static bundle		This is the default setting when a bundle is created. You do have to specify the number of used licenses for this kind of bundle. The number of possible licenses for a system / extension depends on the number of available licenses.
		Warning (static bundle): The bundle contains systems / modules that are not contained in the standard scope. The bundle is not available in the licensing scope. The service can be started.
		Error (static bundle): The existing systems / modules are no longer available in the licensing scope. The existing bundle cannot be started.
Variable bundle		For these bundles you do <i>not</i> have to specify the number of licenses used. The maximum number of possible licenses for a system / extension is limited by the number contained in the licensing scope.
		Warning (variable bundle): The bundle contains systems / modules that are not contained in the standard scope. The bundle is not available in the licensing scope. The service can be started.
		Error (variable bundle): The existing systems / modules are no longer available in the licensing scope. The existing bundle cannot be started.

### Toolbar:

The following buttons are available on the toolbar above the list of **Defined bundles** :

Button	Meaning
 (New)	Creates a new bundle.
 (Edit licenses)	Allows the number of licenses to be edited.
 (Bundle properties)	Makes it possible to rename a selected bundle and / or change a static bundle into a variable bundle.
 (Delete)	Deletes the selected bundle(s). Removes selected systems or extensions from a bundle.
 (Import)	Opens a dialog allowing bundle files to be imported.
 (Export)	Opens a dialog allowing the defined bundles to be exported as a bundle file (*.4elm).
 (Update)	Updates bundles with new systems and modules.
 (Delete licenses)	Delete licenses (systems / modules) that are no longer required from a bundle.



### Popup menu:

You can call up a popup menu inside the **Defined bundles** list which will have the following menu items available:

Menu item	Meaning
New bundle	Creates a new bundle.
Editing bundle properties	Opens the <b>Edit bundle properties</b> dialog for the selected bundle. Makes it possible to rename a selected bundle and / or change a static bundle into a variable bundle.
Number of licenses to be edited	Allows the number of licenses to be edited. This menu item is not available for variable bundles.

Menu item	Meaning
Delete	Deletes the selected bundle(s). Removes selected systems or extensions from a bundle.

## Defining new bundles

1. In the **EPLAN License Manager – Configurator** dialog switch to the **Bundles** tab.
2. Next to the **Defined bundles** field, click on  (New).  
⇒ The **New bundle** dialog opens.
3. Here enter the bundle name that will later be available to users.
4. Activate the **Variable bundle** check box if you want to create a variable bundle.
5. Click **[OK]**.
6. Add the desired systems and extensions to the bundle by double-clicking them or by clicking the Move right button .



### Note:

Systems and modules from a rental license can also be added to a bundle. Take into account that these are no longer available in the bundle when the rental license expires.

7. Then click **[Apply]**.  
⇒ The defined bundle is saved. The **EPLAN License Manager - Configurator** dialog will remain open, and you can select additional settings.



 **Notes:**

- Click [**Update service**] after you have carried out your settings. Your settings are then updated for all the users during the license selection.
- Make sure that the systems and extensions in the bundle always result in a valid combination in terms of licenses.

## Editing bundles

You can add or remove licenses from a selected system or the extension of a static bundle by using the **Edit number of licenses** feature.

 **Note:**

At rental licenses only the number of rented licenses can be added.

1. Select a system or extension from a bundle in the **Defined bundles** box. Multiple systems and / or extensions can also be selected.
2. Select the popup menu item **Edit number of licenses**.  
⇒ The **Edit number of licenses** dialog opens.
3. Enter the number of licenses into the **Number** field that are to be available for the selected bundle. The maximum possible number is the number of licenses available for this system / extension. Entering "0" removes a selected system / extension.
4. Then click [**Apply**].  
⇒ Your changes are saved. The **EPLAN License Manager - Configurator** dialog will remain open, and you can select additional settings.

## Determining Properties

You can specify the following properties and carry out the following actions in the **Properties** tab:

### **Maximum number of computers allowed**

This field displays the number of computers that can access the EPLAN License Manager simultaneously.

### **License expiration date:**

If your license has an expiration date, it is displayed here.

### **Cross-domain usage:**

If you want to use the EPLAN License Manager across domains, you have to have this license.

### **Monitoring interval:**

If the EPLAN application on the client computer does not contact the server within the time interval specified in **Timeout for license user response** (e.g., due to a program abort), the license previously in use is released by the EPLAN License Manager and is then available to another user.

### **[Change password]:**

This button is used to specify a password for the ELM Configurator. The password protects the program from unauthorized access.

### **[Monitor]:**

Use this button to open the "EPLAN License Manager Monitor". Here you can have the license status of the EPLAN License Manager displayed. In addition you can check the status of the Standby License Manager.

## Changing the password for the configuration program

1. In the **Properties** tab, actuate the **[Change password]** button.  
⇒ The **Change password** dialog opens.
2. Enter your old password in the **Old password** box.



### Note:

Please note that the **Old password** box must be *empty* when a password is set up for the *first time*. Otherwise, the correct old password must always be entered here.

3. Enter your new password in the **New password** box.
4. To avoid typing errors on entry, you must enter the password a second time in the **Confirm** box.
5. Click **[OK]**.  
⇒ The next time the EPLAN License Manager - Configurator is started, the **Start EPLAN License Manager - Configurator** dialog is displayed and you must enter the password before you can make settings in the configuration program.



EPLAN Software & Service GmbH & Co. KG  
An der alten Ziegelei 2  
40789 Monheim am Rhein · Germany  
Phone: +49 (0) 21 73 / 39 64-0  
Fax: +49 (0) 21 73 / 39 64-25  
Info@eplan.de · www.eplan.de